




Assembly and Storage of your Pop-Up

Play Tent


IMPORTANT: The assembly and storage of your Pop-Up Play Tent should always be carried out by a responsible adult.
IMPORTANT: Children should be supervised at all times!
AGE: 3+

Assembly...

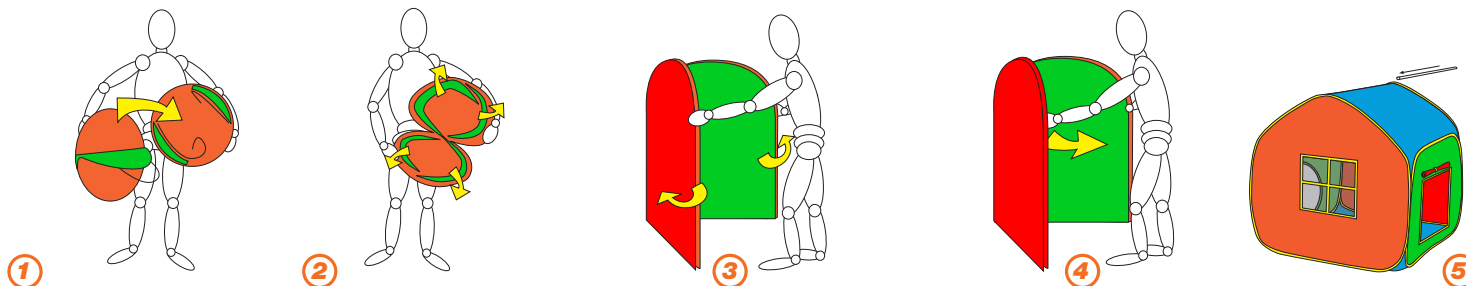

- Carefully remove the Play Tent from its carry bag.
- Open up the top ring and allow it to unfold slowly, forming one complete panel.
- Open up the panel like a book.
- Reach inside and grasp the frame at mid-height. Pull the frame towards you carefully. Your Play Tent should then simply pop open.
- Stretch out the Play Tent to its full width. It's as simple as that... your Play Tent is now ready for use!

Storage...

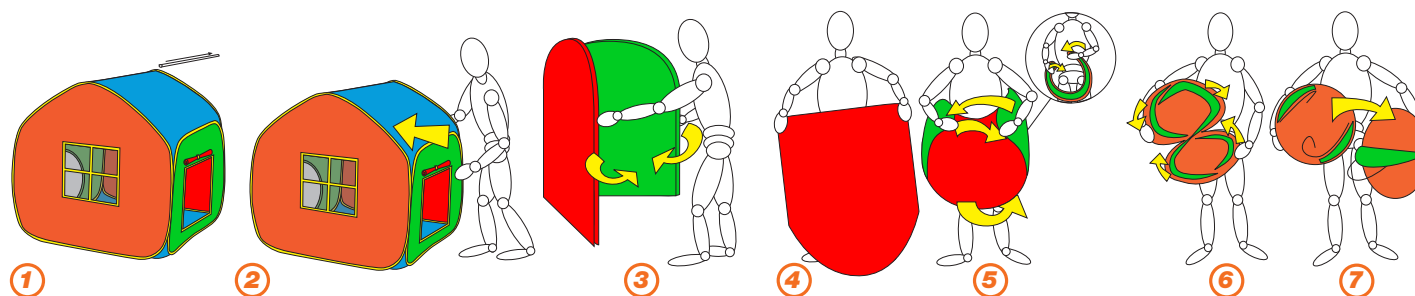

- Remove accessories from the Play Tent & store safely.
- Grasping the steel frame at mid-height of the tent joining two sides together, firmly push the frame towards the opposite side of the tent.
- Fold the two sides together like a book, such that you are left with one complete panel containing all sides.
- Place one hand at each corner of the base of the Play Tent with your arms held fully away from your body.
- Bring the two corners in your hands together by bending the frame from a flat shape into a 'U' shape, crossing your hands over the top of the 'U' shape formed.
- The Play Tent will now have formed loops that can be collapsed and gently gathered together.
- Please ensure that you hold the loops tightly together before inserting the Play Tent into the carry bag to ensure that it does not 'pop' open...it's as simple as that!

Handy Hints & Warnings

Here's a few suggestions to ensure that you get the maximum enjoyment and life from your Play Tent:

Practice

Before using your Play Tent, we suggest you perfect the folding technique. It will take 3-5 attempts before you get it right but after a while you will be able to assemble and fold the product away in seconds.

Surfaces

To ensure that you get the maximum use and enjoyment from the product – do not set it up on concrete or other jagged and hard surfaces as they may tear the material around the frame. It is advisable to set it up only on soft surfaces like grass or sand.

Frame

The frame is made from high tensile spring steel and occasionally a twist may occur if folded incorrectly. It can be easily adjusted back into shape by simply tracing the frame from the top of the play-tent to the spot where the twist occurs. Using both hands twist it back so that the frame snaps back into the same angle as the rest of the frame.

WARNING! This product has an internal spring frame that will 'pop' open with some force. NEVER let small children unfold or fold this product.

NEVER allow a naked flame near this product – although it is made from fire retardant fabric, it will burn if left in continuous contact with a naked flame.

DO NOT continue to use this product if any part of the steel frame becomes either bent or broken.

CLEAN ONLY with a damp cloth – other cleaning substances might render the flame-retardant coating ineffective.

DO NOT open your Play Tent in a confined space as it is designed to open to its full size in seconds. Always make sure that there is ample space in the area you have chosen to set it up and you must hold it away from your body when unfolding.

www.thepopupco.com

Granted European Patent No. 0331029 ■ US Patent No. 4825892 ■ Made in China