

THETFORD

BUILD IN APPLIANCES

KITCHEN CENTRE



USER AND INSTALLATION INSTRUCTIONS

READ AND RETAIN FOR FUTURE REFERENCE

FOR USE IN

GB, IE, FR, NL, BE, LU, ES, IT, NO, DE, DK, SE, CY, CZ, EE, GR, LT
LV, PT, RO, SK, CH, BG, FI

THETFORD LIMITED

UNIT 19 Oakham Drive, Parkwood Industrial Estate
Rutland Road, Sheffield S3 9QY, ENGLAND.

TEL: + 44 (0) 114 273 8157 FAX: + 44 (0) 114 275 3094

Kitchen Centre Installation instructions

Decide on the location of the Kitchen Centre taking into account the services required, and prepare the worktop for installation as shown in Fig. 2.

Supplied with the bowl is a silicone rubber seal, which should be fitted to the bowl prior to fitting into the aperture. Place the bowl into the prepared aperture in the worktop, ensure that the seal is seated correctly, and open the glass lid.

There are 3 fixing positions, 2 on either side of the bowl towards the rear and one at the front which also serves as the glass lid stop, see Fig 1 for details.

Supplied with the bowl in a small plastic bag is the glass lid bump stop, used at the front, and the washers and covers for the rear screws. The front bump stop should be secured with a 25mm long N° 6 woodscrew and the washers at the rear with a 15mm long N° 6 woodscrew. Before screwing the bowl in place it is advisable to drill pilot holes into the worktop edge with a 2.5mm drill.

To ensure a good seal, firstly apply pressure in the base of the bowl and drill a pilot hole for each of the fixing positions. It is advisable to slightly angle the drill down so that when the screw is applied it pulls the bowl down to the worktop. Take care not to angle the drill by more than about 10° otherwise the screw will apply uneven pressure around the fixing hole, which could result in damage.

To ensure a good seal, firstly apply pressure in the base of the bowl towards the rear and fix the two rear screws at either side of the bowl. Then apply pressure in the base of the bowl towards the front and fix in the front screw complete with glass lid bump stop.

When the bowl is fully fixed, clip on the 2 grey domed screw covers at the rear.

Fig. 1. Fixing Details


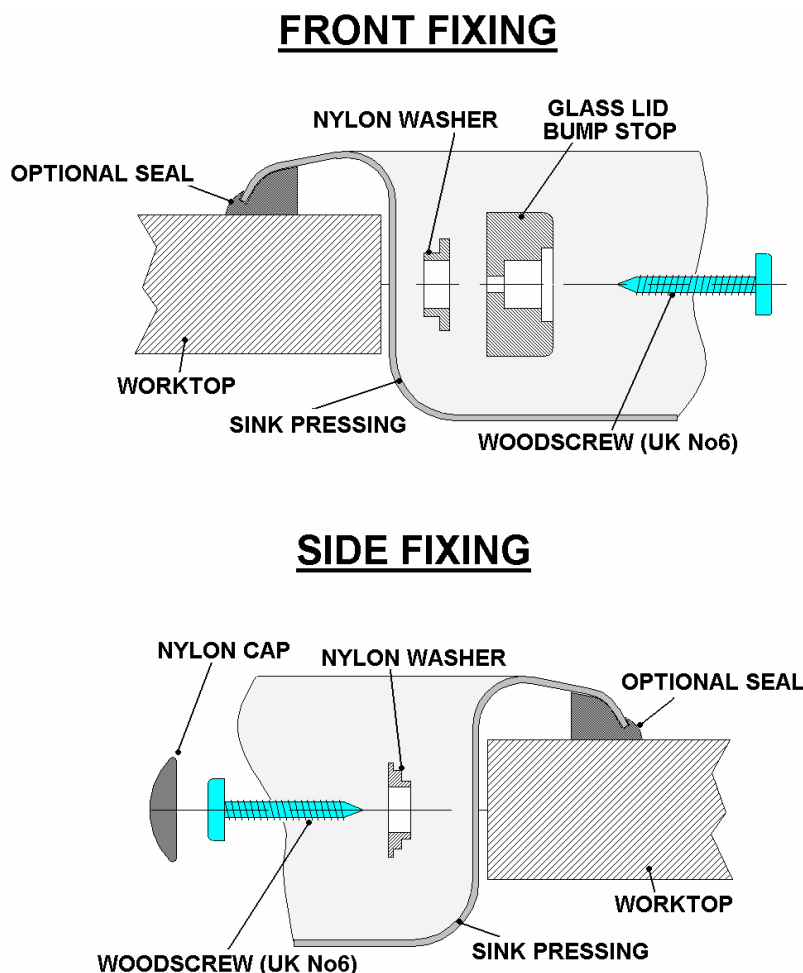


Fig. 2.

WORKTOP CUTOUT

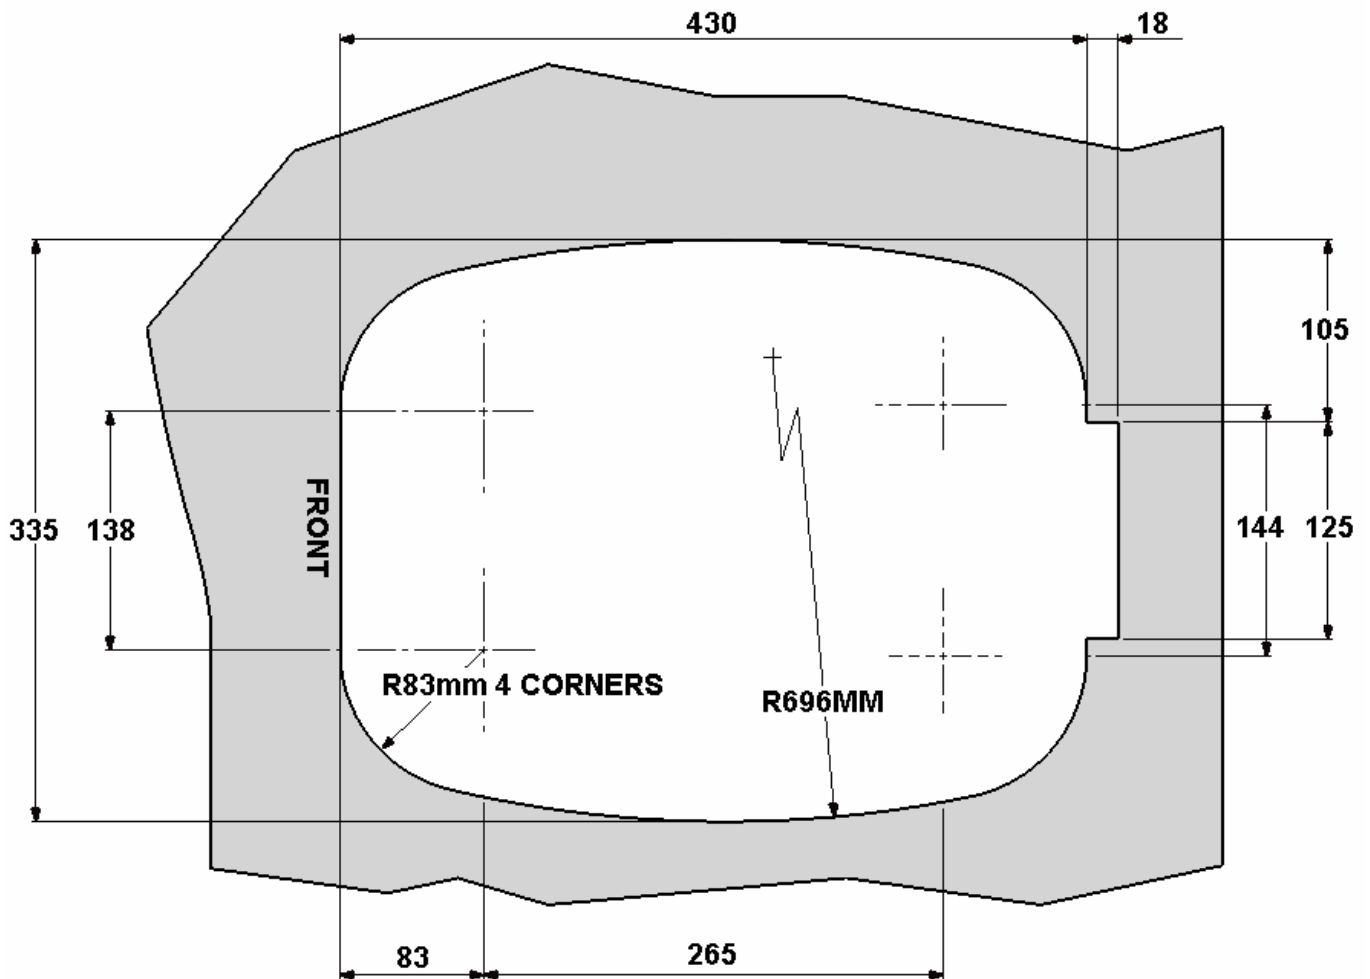

CLEANING INSTRUCTIONS

Stainless Steel

After use always clean the surface with soap and hot water followed by a clean water rinse and drying with a soft cloth to prevent spotting. For more stubborn dirt or grease a non-abrasive multi-purpose cream cleaner, such as CIF, may be used.

The quality of water can affect your bowl's appearance. If the water has high iron content, a brown surface stain can form on the bowl giving the appearance of rust. Additionally, in areas with a high concentration of minerals, or with over-softened water, a white film may develop on the sink. To combat these problems, towel dry the sink after use, and clean at least once every week .

Surface scratching will be most noticeable on highly polished components. These marks are usually only superficial and can be removed with a proprietary stainless steel cleaner/polish. If the surface has a directional polished grain always clean along the grain and NOT across. Never use wire wool pads to clean the surface.

Cleaning agents containing bleach should NOT be left in contact with stainless steel. This includes many of the new "trigger-dispense" products and some multi purpose cream cleaners. Also leaving rubber mats or dishpans in the sink can lead to surface rust or pitting, always remove them after use.

THETFORD

BUILD IN APPLIANCES KITCHEN CENTRE



INSTRUCTIONS D'UTILISATION & INSTALLATION

A LIRE ATTENTIVEMENT ET A CONSERVER

POUR UTILISATION AUX

GB, IE, FR, NL, BE, LU, ES, IT, NO, DE, DK, SE, CY, CZ, EE, GR, LT
LV, PT, RO, SK, CH, BG, FI

THETFORD LIMITED
UNIT 19 Oakham Drive, Parkwood Industrial Estate
Rutland Road, Sheffield S3 9QY, ENGLAND.
TEL: + 44 (0) 114 273 8157 FAX: + 44 (0) 114 275 3094

Instructions d'installation Kitchen Centre

Décider de l'emplacement où vous allez installer votre 'Kitchen Centre' en prenant en compte les paramètres de service requis et préparer le plan de travail à l'installation comme indiqué sur le schéma 2.

Un joint silicone caoutchouc est fourni avec l'évier. Ce joint doit être mis en place sur le l'évier avant toute insertion dans la découpe effectuée. Placer l'évier dans la découpe du plan de travail en vous assurant que le joint est fixé correctement et ouvrir le couvercle en verre.

Il existe 3 points de fixations, 2 de chaque côté de l'évier vers l'arrière et un point situé à l'avant qui sert aussi de butée pour le couvercle, se reporter au schéma 1 pour plus détails.

Le caoutchouc de butée pour le couvercle en verre et les cache-vis sont aussi fournis avec votre 'Kitchen Center' dans un petit sachet en plastique. La butée frontale doit être fixée avec une vis à bois de 25mm long et les butées arrière avec des 15 mm N° 6.

Avant vissage de l'évier, il est préférable d'effectuer des pré-perforations dans le plan de travail avec un forêt de 2.5mm.


Pour garantir une bonne étanchéité, appliquer d'abord une pression à la base de l'évier et faire une pré-perforation aux points de fixations. Il est conseillé de légèrement incliner le forêt pour, lors du serrage des vis, que l'évier soit bien appui sur le plan de travail. Prendre soin toutefois de ne pas incliner le forêt à plus de 10° d'angle sinon la vis ne s'appliquera de manière égale dans la perforation, pouvant créer des dommages.

Toujours pour garantir une bonne étanchéité, appliquer d'abord une pression vers l'arrière de l'évier et fixer les deux vis arrière de chaque côté de l'évier. Appliquer ensuite la pression à l'avant de l'évier, fixer la dernière vis et la butée du couvercle en verre.

Une fois que l'évier est complètement installé, clipser les 2 cache-vis gris à l'arrière.

Schéma. 2 Détails des fixations

FIXATION FRONTALE

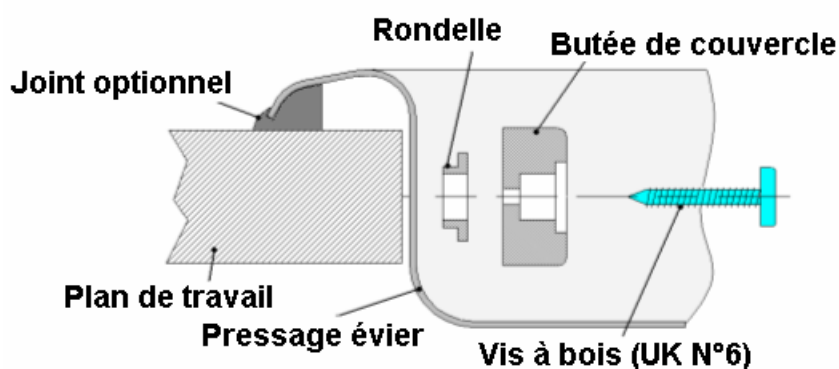

FIXATION LATÉRALE


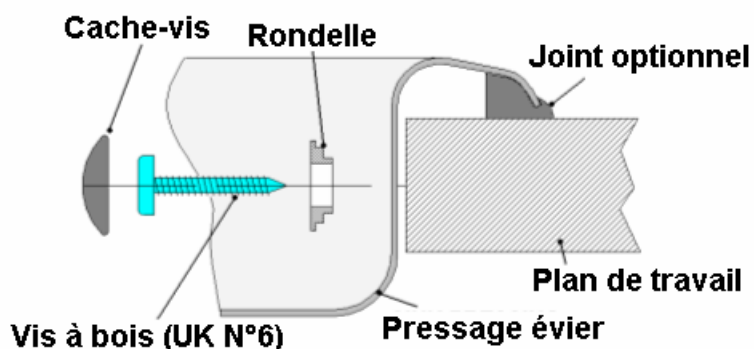


Schéma 2.

DECOUPE PLAN DE TRAVAIL

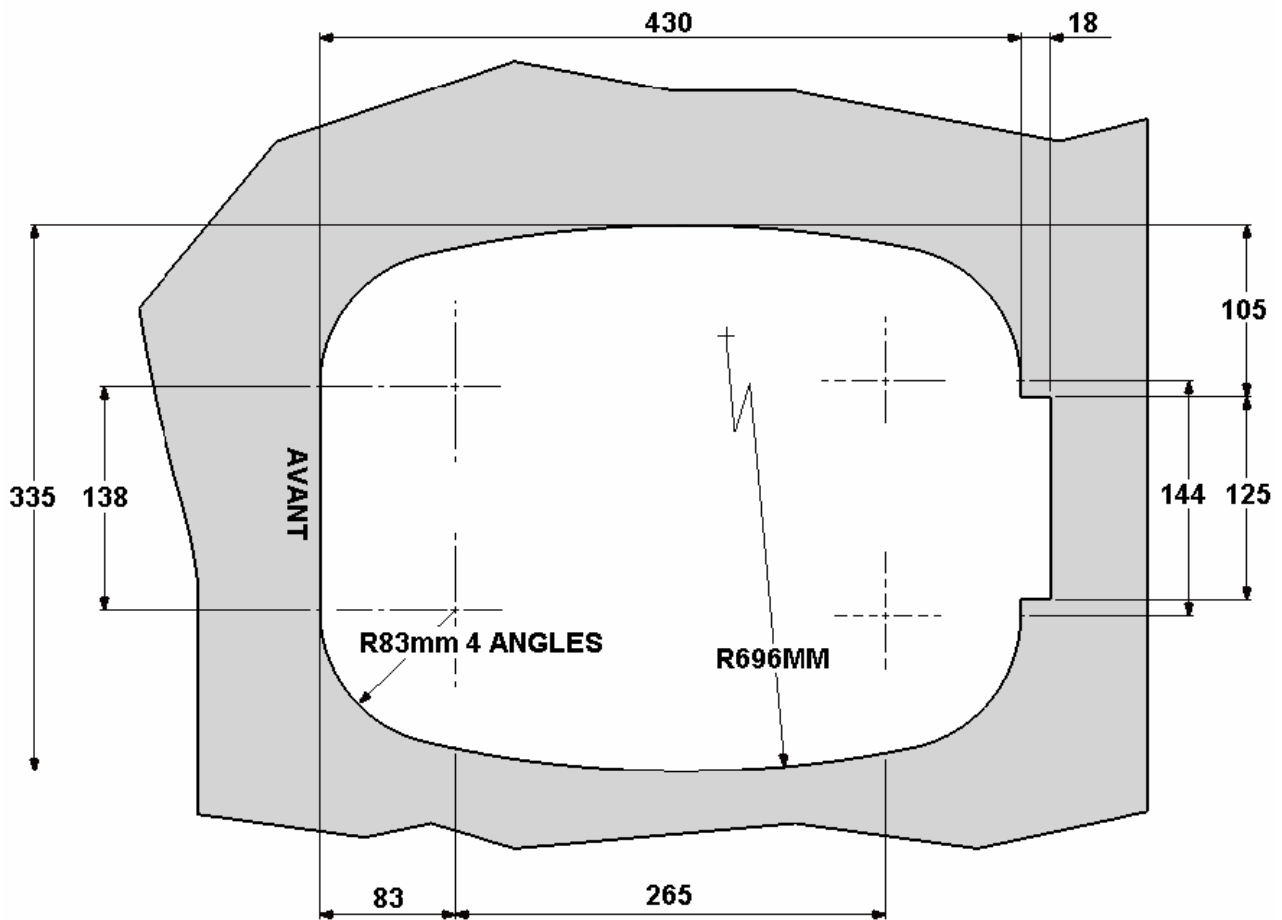

INSTRUCTIONS DE NETTOYAGE

Inox

Après utilisation, toujours nettoyer la surface avec du savon et de l'eau chaude et bien rincer à l'eau claire ensuite. Passer ensuite un chiffon sec et non abrasif pour bien essuyer et empêcher la formation de traces. Pour les tâches les plus résistantes et la graisse, une crème de nettoyage non abrasive peut être utilisée.

La qualité de l'eau peut affecter l'apparence de votre évier. Une eau très ferrugineuse peut faire apparaître des traces marron pouvant faire croire à l'apparition de rouille. De même, une eau avec une forte concentration minérale, un léger film blanc peut se développer sur l'évier. Pour lutter contre ces effets, bien essuyer l'évier après utilisation et nettoyer une fois par semaine au moins.

Des éraflures peuvent aussi apparaître sur les éléments polis. Ces marques sont généralement superficielles et peuvent être enlevées avec un nettoyant spécifique pour l'inox. Si la surface a un grain directionnel, toujours nettoyer dans le sens du grain et pas de travers. Ne jamais utiliser d'éponges métalliques pour nettoyer.

Des nettoyeurs contenant de la javel ne doivent jamais être laissés en contact avec la surface inox, cela inclut tous les vaporisateurs de produits nettoyants. Laisser des ustensiles de cuisine ou des éléments peut aussi créer des traces de rouille ou des piquetages dans l'évier, toujours les enlever après utilisation.